

USER MANUAL

To avoid the risk of accidents or damage to this appliance

It is essential to read these instructions before it is installed

And used for the first time.

Contents

Installation, 3-5

Further notice

Fitting the appliance

Description of the appliance, 5-6

Operating principle

How to use, 7-10

Open protection

Tips

Attention

Warning

Clear and maintain, 10

! Thank you for choosing our disinfection cabinet, before operating your new appliance please read this instruction booklet carefully. It contains important information for safe use, installation and care of the appliance.

! Please keep these operating instructions for future reference. Pass them on to possible new owners of the appliance.

Installation

! The appliance must be installed by a qualified professional according to the instructions provided. Incorrect installation may cause harm to people and animals or may damage property.

! The appliance must be installed to an adequate circuit with complete installation.

! Socket needs to be within 1.2m in radius from the wire interface with rated current above 10A.

! An effective earthing system should be guaranteed continuous and complete; it's prohibited to attach the earth wire to any pipe, phone wire or lightning arrester which may cause serious consequence.

! Use separate socket for this appliance only, Install the socket into a power leakage protection circuit to enhance the safety.

! This is not a bearing table!

Further notice

! Keep packaging material out of the reach of children. It can become a choking or suffocation hazard.

! Before connecting the appliance to the mains supply, make sure that the voltage and frequency details given on the data plate correspond with the on-site electricity supply; otherwise the appliance could be damaged.

! Faulty components must only be replaced by genuine original parts.

! During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply.

! Consult a qualified electrician if in any doubt.


Fitting the appliance

1, the installation cavity should according to the dimensions indicated in the diagrammatic drawing, positioned in an appropriate appointed area in cabinet. (see below diagrams)


Insert disinfection cabinet, open its drawer to fix it to the cabinet with four wooden screws. This must be installed according to their relative installation instruction manuals.

2, It's adjustable for the any position of the cabinet, yet in any case the base of the cabinet bearing force should over 60kg.

3, The disinfection cabinet should be fixed firmly without any shake when open/close the drawer.it also should be fully sealed once the drawer closed.

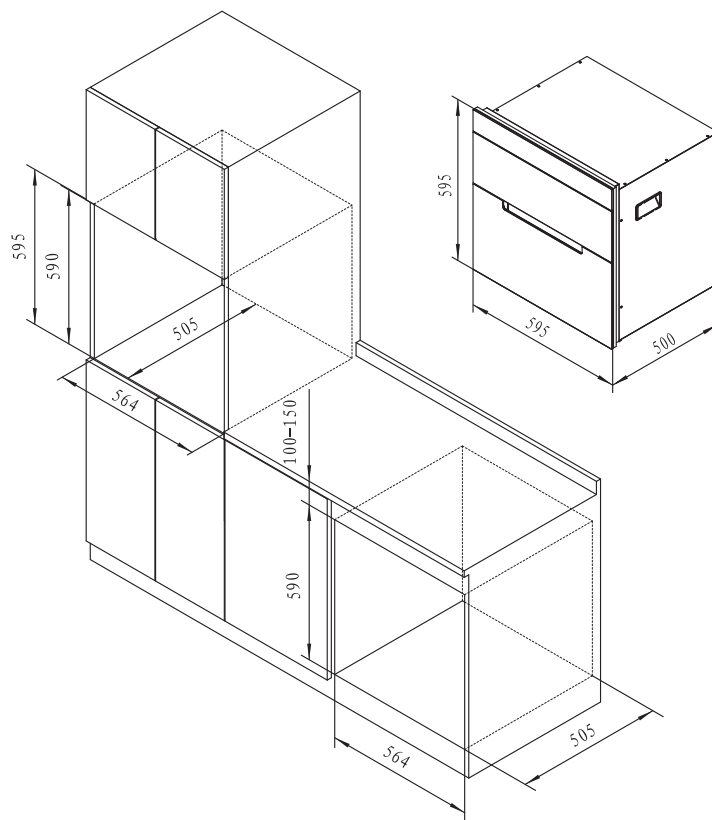

Description of the appliance

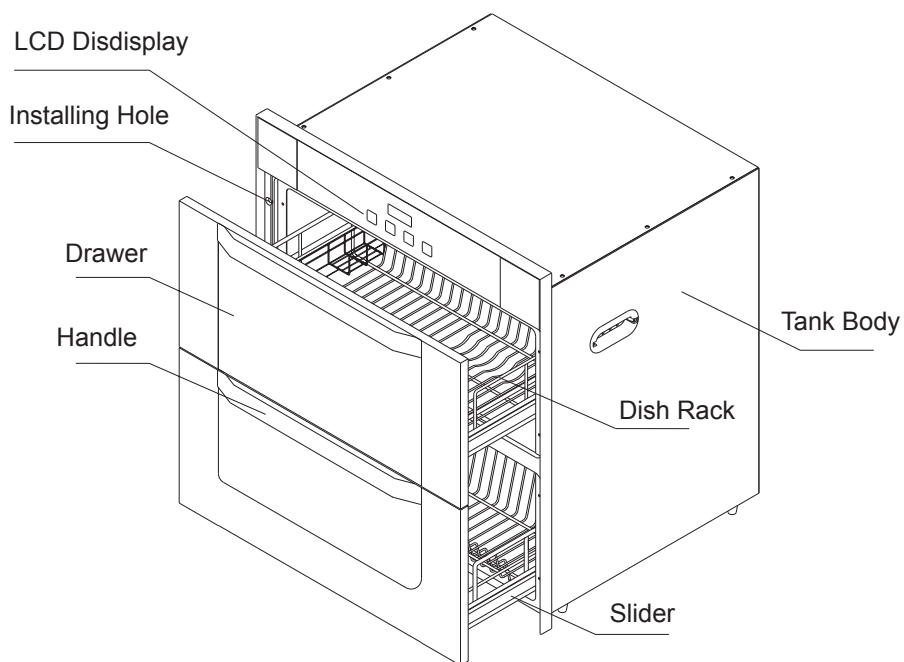


Operating principle


The product is combined with UV and ozone, using PTC and fans to sterilize and dry dinnerware (prevent coccus and germs) the effect reaches a two-stars standard of GB17988-2004.

Operating System

CZ-1006

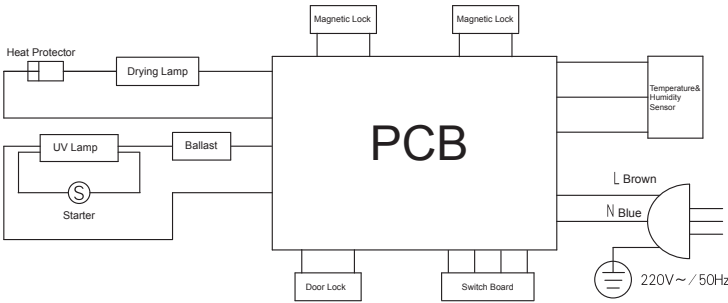

CZ-100G

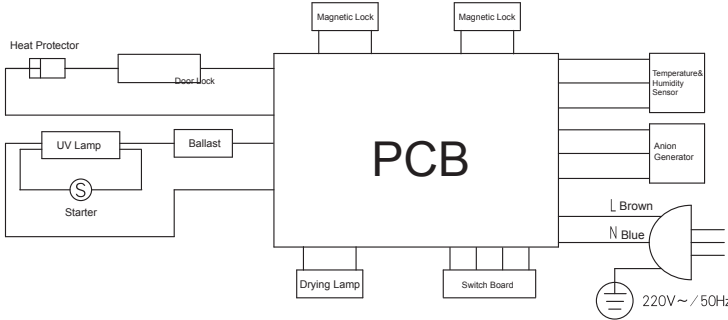

Technical Information

electric	input power (W)	ozone (mg/m ³)	capacity (L)	carry weight (upper drawer) (kg)	carry weight (lower drawer) (kg)	internal temperature (°C)	UV (μW/cm ²)	air humidity (%)	light use life (h)	dimensions (mm)
220V~ 50Hz	310	≥40	100	6	8	≤75	≥30	≥80	≥5000	595X595X500

For household disinfection only.

How to use:


1, open or close the drawer in aclinic direction, do not push too hard.

2, place dishware upright after wash and drain, keep a certain distance between dishes to ensure the disinfection circulation. Keep the dishes away from the vent to get a better drying effect.

3, setting

Connect to the electricity supply after been fully installed; make sure the drawer keep closed when working. There would be a prompting sound with a “Di” once the connection is done.

Model: CZ-1006

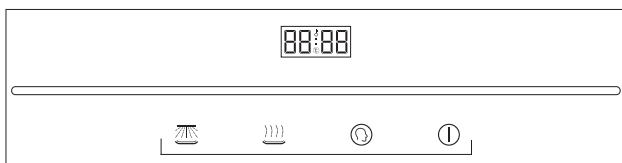

Model: CZ-100G





(1), “ ① ” key: press the button once to standby, lamp illuminated with time displayed


00:00; press the button twice to power off lamp and display.

(2), “ ② ” key: press the button once when standby, lamp illuminated with time displayed 60:00, the system will automatically start sterilizing in 5 seconds with indicate lamp if no other program under instruction, it'll automatically stop when time countdown to 00:00; after waiting another 45:00 count down, program drying starts to operate with lamp lamp illuminated and time displayed 60:00. They'll automatically stop when time countdown

to 00:00 with 16 times “Di” alarm. During operation, press the “Auto” button once more to cancel or stop the program.

(3), “ ” key: press the button once when standby, lamp illuminated with time displayed 90:00, within 5 seconds, press twice to switch time to 60:00 and press three times to switch to 30:00. After 5 seconds, system will start to disinfect. It'll automatically stop when time count down to 00:00 with 16 times “Di” alarm.





(4), “ ” key: press the button once when standby, lamp illuminated with time displayed 90:00, within 5 seconds, press twice to switch time to 60:00 and press three times to switch to 30:00. After 5 seconds, system will start to dry. It'll automatically stop when time count down to 00:00 with 16 times “Di” alarm.

(5), Auto function: Press  for 3 seconds to start auto function with a “Di” alarm. Auto function include auto warming and auto disinfecting.

Auto warming: During below three time periods during one day, the sterilizer will automatically start drying to keep the dishes warm.

6:00AM-8:00AM ; 11:00AM-13:00PM ; 17:00PM-19 : 00PM

Remark: Other functions are prior to auto function during the same time.

(6), Time setting: Press  for 3 seconds with a “Di” alarm, the screen digits start twinkling, press  to increase and press  to decrease hour setting, press  to confirm hour setting and then adjust minute setting using the same method.

(7), Anion function: Anion function works during drying mode or 45 minutes after disinfecting finished. (Only model CZ-100G has this function)

4, Door open protection

Open-protection lamp illuminates when the drawer is open, all function stop under protection then. Any program can be operated only when the drawer is closed and the protection lamp turns off

Tips:

During the first 5 seconds, customer can choose any combination of the disinfection and drying: 90, 60, 30 minutes' disinfection and 90, 60, 30 minutes' drying. When the combination undergoing, it'll automatically run the disinfection first, there will be 15 minutes before drying start to function with anion after disinfection's done. Disinfection and drying cannot under running at the same time; lamp would illuminate to show the relevant function. After the first 5 minutes, any button press would indicate a cancellation of the relevant operation. To get a two-star disinfection, please choose a 90 and 90 minutes' combination.

Attention

- 1, Actions non-compliance with these warning and safety instructions will be dangerous to the user.
- 2, Only use genuine original spare parts and accessories with this appliance.
- 3, Do not use alternating current other than 185v-245v, otherwise the appliance could be damaged. Consult a qualified electrician if in any doubt.
- 4, Do not open or try to fix the appliance other than a qualified electrician.
- 5, Do not spray waters or liquid to the appliance when working, otherwise may cause a dangerous electric shock or short circuit.
- 6, Do not use this appliance to lacquerware, heat-sensitive plasticware, or things other than tableware.
- 7, It's recommended that the tableware should be emptied before put into the appliance.
- 8, it's recommended that one should open the drawer after 20 minutes after the operation

finished to avoid any leak or burn.

9, the appliance would be automatically stop running once the drawer forced to open to prevent any burn.

10, Do not force to open the drawer when it's under function.

Warning

1, Stop using the appliance immediately if notice any leak or light, call for a qualified electrician to repair.

2, if the disinfection tube found unworking or broken, replace it with a same wattage(15w) and wavelength(253.7nm)tube.

3, any program should under function only when the drawer fully closed to avoid any leak, radioactive or burn.

Clear and maintain

Please stop the entire program and unplug the appliance, wait till the machine cool down before the clear and maintain procedure.

1, using a soft cloth with neutral detergent to clean the drawer, dish racks and bladder if needed, make sure to wipe the detergent with wet cloth then buff dry with a clean one.

2, empty the water plate regularly to avoid any overflow.

3, Gas, alcohol, or solvent is prohibited for cleaning, it'll cause crack and discoloration of painted film.